

# Blank Out Sign Installation Manual

## Step 1: Product and accessories preparation



## Step 2: Install the mounting accessories onto the groove on the back of the product.



For Horizontal Arm Mounting



For Vertical Post Mounting




The accessories are inserted into the back slot.

## Step 3: Install the product onto a horizontal arm or vertical post.



Horizontal

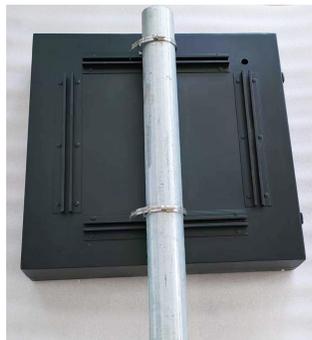

Vertical



Tighten with a flathead screwdriver.

Note: Only a flathead screwdriver is needed. Installation may require two people.